



OUTDOOR & OFF-ROAD EQUIPMENT

T 1300 796 960 sales@ample-outdoors.com.au

F 02 6355 2726 www.ample-outdoors.com.au

82 Donald Rd, Clarence NSW 2790

PO Box 420, Lithgow NSW 2790

ARNOLD MILLETT PTY LTD ABN 91 003 510 601

KILOWATTS X-GAUGE SETUP

Display instantaneous engine kilowatt output as a gauge.

- Start from the **HOME** screen, press **MORE>MORE>MORE>XGAUGE**
- Then in the top right select the number of the X-Gauge memory you want to use (0 to 24)
- Next select **<EDIT** this will take you to the **TXD** screen
- Use the **+** and **-** buttons to enter each character at the underscore position, the **→** button at the top right will move to the next character space. Use **+** and **-** buttons after each character the **->** in the top right will move to the next character space
- Enter **00** into the **TXD** screen and press **OK>**
- Enter **400080000000** in the **RXF** screen and press **OK>**
- Enter **0000** in the **RXD** screen and press **OK>**
- Enter **000A001F0000** for petrol vehicles or **000A00300000** for diesel vehicles in the **MTH** screen and press **OK>**
- Enter **kW** in the **NAME** screen and when you are finished press **OK>**
- Lastly press **SAVE**.

Now you can select your new gauge just like any other one. From the home screen, press **GAUGE**, press the button next to the gauge you want to use for the X-Gauge. Keep pressing as needed until your newly created kW X-Gauge name appears.